.-online.com antibodies

Datasheet for ABIN6965642 XCL1 ELISA Kit

Image



Overview

Quantity:	96 tests
Target:	XCL1
Reactivity:	Rat
Method Type:	Sandwich ELISA
Detection Range:	62.5 pg/mL - 4000 pg/mL
Minimum Detection Limit:	62.5 pg/mL
Application:	ELISA

Product Details

Purpose:	For quantitative detection of Lptn/XCL1 in serum, plasma, tissue homogenates.
Sample Type:	Plasma, Serum, Tissue Homogenate
Analytical Method:	Quantitative
Detection Method:	Colorimetric
Specificity:	This assay has high sensitivity and excellent specificity for detection of Lptn/XCL1. No significant cross- reactivity or interference between Lptn/XCL1 and analogues was observed. Note: Limited by current skills and knowledge, it is difficult for us to complete the cross-reactivity detection between Lptn/XCL1 and all the analogues, therefore, cross reaction may still exist.
Sensitivity:	37.5 pg/mL
Components:	Pre-coated, ready to use 96-well strip plate

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 1/6 | Product datasheet for ABIN6965642 | 09/10/2023 | Copyright antibodies-online. All rights reserved.

	 Plate sealer for 96 wells Standard Sample/Standard Dilution Buffer Biotin-labeled Antibody (Concentrated) Antibody Dilution Buffer HRP-Streptavidin Conjugate (SABC) SABC Dilution Buffer TMB Substrate Stop Solution Wash Buffer (25 x concentrate) Instruction manual
Material not included:	 Microplate reader (wavelength:450nm) 37 °C incubator Automated plate washer Precision single and multi-channel pipette and disposable tips Clean tubes and Eppendorf tubes Deionized or distilled water

Target Details

Target:	XCL1
Alternative Name:	Lymphotactin (XCL1 Products)
Background:	Lptn, XCL1, Lptn, ATAC, SCM-1 alpha, ATACSmall-inducible cytokine C1, C motif chemokine 1, chemokine, C motif ligand 1, Cytokine SCM-1, LPTNSCM-1-alpha, LTNXC chemokine ligand 1, lymphotactin, lymphotaxin, SCM-1, SCM1A, SCM-1a, SCYC1SCM1
UniProt:	P51672
Pathways:	Regulation of Leukocyte Mediated Immunity, Positive Regulation of Immune Effector Process, Production of Molecular Mediator of Immune Response, Activated T Cell Proliferation

Application Details

Sample Volume:	100 μL
Plate:	Pre-coated
Protocol:	1. Wash plate 2 times before adding Standard, Sample (diluted at least 1/2 with Sample Dilution Buffer) and Control (blank) wells!
	2. Add 100 μL standard or sample to each well and incubate for 90 minutes at 37 °C.
	3. Aspirate and wash plates 2 times.

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 2/6 | Product datasheet for ABIN6965642 | 09/10/2023 | Copyright antibodies-online. All rights reserved.

4. Add 100 μ L Biotin-labeled antibody working solution to each well and incubate for 60 minutes
at 37 °C.
5. Aspirate and wash plates 3 times.

- 6. Add 100 μL SABC Working Solution into each well and incubate for 30 minutes at 37 °C.
- 7. Aspirate and wash plates 5 times.
- 8. Add 90 μL TMB Substrate Solution. Incubate 10-20 minutes at 37 °C.
- 9. Add 50 μL Stop Solution. Read at 450nm immediately and calculation.

Reagent Preparation:

• Bring all reagents and samples to room temperature for 20 minutes before use.

 Wash Buffer: If crystals have formed in the concentrate, you can warm it with 40 °C water bath Concentrated Wash Buffer into 750 mL Wash Buffer with deionized or distilled water. Put unused solution back at 2-8 °C.

Standards:

1. Add 1 mL Sample Dilution Buffer into one Standard tube (labeled as zero tube), keep the tube at room temperature for 10 minutes and mix them thoroughly. Note: If the standard tube concentration higher than the range of the kit,please dilute it and labeled as zero tube.

2. Label 7 EP tubes with 1/2, 1/4, 1/8, 1/16, 1/32, 1/64 and blank respectively. Add 0.3 mLof the Sample Dilution Buffer into each tube. Add 0.3 mLof the above Standard solution (from zero tube) into 1st tube and mix them thoroughly. Transfer 0.3 mL from 1st tube to 2nd tube and mix them thoroughly. Transfer 0.3 mL from 2nd tube to 3rd tube and mix them thoroughly, and so on. Sample Dilution Buffer was used for the blank control. Note: It is best to use Standard Solutions within 2 hours.

• Preparation of Biotin-labeled Antibody Working Solution:

Prepare it within 1 hour before experiment.

- 1. Calculate required total volume of the working solution: 0.1ml/well x quantity of wells. (Allow 0.1-0.2 mLmore than the total volume.)
- 2. Dilute the Biotin-detection antibody with Antibody Dilution Buffer at 1:100 and mix them thoroughly. (i.e. Add 1 μ L Biotin-labeled antibody into 99 μ L Antibody Dilution Buffer.)

 Preparation of HRP-Streptavidin Conjugate (SABC) Working Solution: Prepare it within 30 minutes before experiment.

- 1. Calculate required total volume of the working solution: 0.1ml/well x quantity of wells. (Allow 0.1-0.2 mLmore than the total volume.)
- 2. Dilute the SABC with SABC Dilution Buffer at 1:100 and mix them thoroughly. (i.e. Add 1 μ L of SABC into 99 μ L of SABC Dilution Buffer.)

Sample Preparation:
 It is recommended to use fresh samples without long storage, otherwise protein degradation and denaturationmay occur in these samples, leading to false results. Samples should therefore be stored for a short periodat 2 - 8 °C or aliquoted at -20 °C (≤1 month) or -80 °C (≤ 3 months). Repeated freeze-thawcycles should be avoided. Prior to assay, the frozen samples should be slowly thawed and centrifuged toremove precipitates.

- If the sample type is not specified in the instructions, a preliminary test is necessary to determinecompatibility with the kit.
- If a lysis buffer is used to prepare tissue homogenates or cell culture supernatant, there is a

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 3/6 | Product datasheet for ABIN6965642 | 09/10/2023 | Copyright antibodies-online. All rights reserved. possibility of causing a deviation due to the introduced chemical substance. The recommended dilution factor is for reference only.

Please estimate the concentration of the samples before performing the test. If the values
are not in therange of the standard curve, the optimal sample dilution for the particular
experiment has to be determined.Samples should then be diluted with PBS (pH =7.0-7.2).

Note:

Washing

The user should estimate the concentration of target protein in the test sample, and select a proper dilution factor to make the diluted target protein concentration fall in the optimal detection range of the kit. Dilute the sample with the provided dilution buffer, and several trials may be necessary. The test sample must be well mixed with the dilution buffer. And also standard curves and sample should be making in pre-experiment. If samples with very high concentrations, dilute samples with PBS first and then dilute the samples with Sample Dilution. The matrix components in the sample will affect the test results, which it need to be diluted at least 1/2 with Sample Dilution Buffer before testing!

Assay Procedure:

Manual: Discard the solution in the plate without touching the side walls. Clap the plate on absorbent filter papers or other absorbent material. Fill each well completely with $350 \,\mu$ L wash buffer and soak for 1 to 2 minutes, then aspirate contents from the plate, and clap the plate on absorbent filter papers or other absorbent material.

Automatic: Aspirate all wells, and then wash plate with 350 µL wash buffer. After the final wash, invert plate, and clap the plate on absorbent filter papers or other absorbent material. It is recommended that the washer shall be set for soaking 1 minute. (Note: set the height of the needles, be sure the fluid can be sipped up completely)

When diluting samples and reagents, they must be mixed completely and evenly. Before adding TMB into wells, equilibrate TMB Substrate for 30 minutes at 37 °C. It is recommended to plot a standard curve for each test.


- Set standard, test samples (diluted at least 1/2 with Sample Dilution Buffer), control (blank) wells on the pre-coated plate respectively, and then, records their positions. It is recommended to measure each standard and sample in duplicate. Wash plate 2 times before adding standard, sample and control (blank) wells!
- 2. Prepare Standards: Aliquot 100 μL of zero tube, 1sttube, 2ndtube, 3rdtube, 4thtube, 5thtube, 6thtube and Sample Dilution Buffer (blank) into the standard wells.
- 3. Add Samples: Add 100 μL of properly diluted sample into test sample wells.
- 4. Incubate: Seal the plate with a cover and incubate at 37 °C for 90 minutes.
- 5. Wash: Remove the cover and discard the plate content, and wash plate 2 times with Wash Buffer. Do NOT let the wells dry completely at any time.
- 6. Biotin-labeled Antibody: Add 100 µL Biotin-labeled antibody working solution into above wells

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 4/6 | Product datasheet for ABIN6965642 | 09/10/2023 | Copyright antibodies-online. All rights reserved.

Storage:	4 °C20 °C
Handling	
Restrictions:	For Research Use only
	Inter-Assay: CV<10%
Assay Precision:	Intra-Assay: CV<8%
	from interpolation to obtain the concentration before dilution.
	Note: If the samples measured were diluted, multiply the dilution factor to the concentrations
	professional software to do this calculation, such as Curve Expert 1.3 or 1.4.
	samples can be interpolated from the standard curve. It is recommended to use some
	vs. the respective concentration of the standard solution (X). The target concentration of the
	well). The standard curve can be plotted as the relative O.D.450 of each standard solution (Y)
	Regarding calculation, (the relative O.D.450) = (the O.D.450 of each well) - (the O.D.450 of blank
	after adding the stop solution.
	12. OD Measurement: Read the O.D. absorbance at 450nm in Microplate Reader immediately
	adding order of Stop Solution should be as the same as the TMB Substrate Solution.
	reaction when apparent gradient appeared in standard wells.) 11. Stop: Add 50 μL Stop Solution into each well. The color will turn yellow immediately. The
	according to the actual color change, but not more than 30 minutes. You can terminate the
	37 °C in dark within 10-20 minutes. (Note: The reaction time can be shortened or extended
	10. TMB Substrate: Add 90 μ L TMB Substrate into each well, cover the plate and incubate at
	stay in the wells for 1-2 minutes each time.
	9. Wash: Remove the cover and wash plate 5 times with Wash Buffer, and let the wash buffer
	 HRP-Streptavidin Conjugate (SABC): Add 100 μL of SABC Working Solution into each well, cover the plate and incubate at 37 °C for 30 minutes.
	stay in the wells for 1-2 minutes each time.
	7. Wash: Remove the cover, and wash plate 3 times with Wash Buffer, and let the Wash Buffer
	touching the sidewall, cover the plate and incubate at 37 °C for 60 minutes.
	(standard, test sample and blank wells). Add the solution at the bottom of each well without

ened kit: All the reagents should be kept according to the labels on vials. The
e Standard and the 96-well stripe plate should be stored at -20 °C upon receipt while
reagents should be stored at 4 °C.
kit: When the kit is used, the remaining reagents need to be stored according to the
prage condition. Besides, please return the unused wells to the foil pouch containing
cant pack, and zip-seal the foil pouch.
•

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 5/6 | Product datasheet for ABIN6965642 | 09/10/2023 | Copyright antibodies-online. All rights reserved.

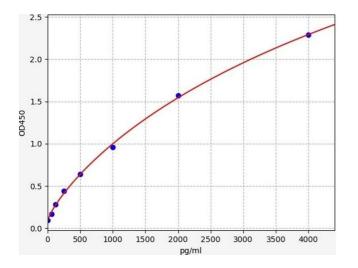

ELISA

Image 1. Typical standard curve

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 6/6 | Product datasheet for ABIN6965642 | 09/10/2023 | Copyright antibodies-online. All rights reserved.