# .-online.com antibodies

## Datasheet for ABIN6967650 IGF2R ELISA Kit

Image



#### Overview

Quantity:	96 tests
Target:	IGF2R
Reactivity:	Human
Method Type:	Sandwich ELISA
Detection Range:	0.625 ng/mL - 40 ng/mL
Minimum Detection Limit:	0.625 ng/mL
Application:	ELISA

## Product Details

Purpose:	For quantitative detection of IGF2R in serum, plasma, tissue homogenates.
Sample Type:	Plasma, Serum, Tissue Homogenate
Analytical Method:	Quantitative
Detection Method:	Colorimetric
Specificity:	This assay has high sensitivity and excellent specificity for detection of IGF2R. No significant cross-reactivity or interference between IGF2R and analogues was observed. Note: Limited by current skills and knowledge, it is difficult for us to complete the cross-reactivity detection between IGF2R and all the analogues, therefore, cross reaction may still exist.
Sensitivity:	0.375 ng/mL
Components:	<ul> <li>Pre-coated, ready to use 96-well strip plate</li> <li>Plate sealer for 96 wells</li> <li>Standard</li> </ul>

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 1/6 | Product datasheet for ABIN6967650 | 09/10/2023 | Copyright antibodies-online. All rights reserved.

	Sample/Standard Dilution Buffer
	Biotin-labeled Antibody (Concentrated)
	Antibody Dilution Buffer
	HRP-Streptavidin Conjugate (SABC)
	SABC Dilution Buffer
	TMB Substrate
	Stop Solution
	Wash Buffer (25 x concentrate)
	Instruction manual
Material not included:	1. Microplate reader (wavelength:450nm)
	2. 37 °C incubator
	3. Automated plate washer
	4. Precision single and multi-channel pipette and disposable tips
	5. Clean tubes and Eppendorf tubes
	6. Deionized or distilled water

### Target Details

Target:	IGF2R
Alternative Name:	Insulin Like Growth Factor 2 Receptor (IGF2R Products)
Background:	IGF2R, CD222, CIMPR, M6P-R, MPR1, MPRI, cation-independent mannose-6-phosphate receptor, Cation-independent mannose-6-phosphate receptor, CI Man-6-P receptor, CI-MPR, M6PR, M6P, IGF2 receptor, M6P, IGF2R, Insulin-like growth factor II receptor, IGF-II receptor, 300 kDa mannose 6-phosphate receptor, MPR 300, Insulin-like growth factor 2 receptor
UniProt:	P11717

## Application Details

Sample Volume:	100 µL
Plate:	Pre-coated
Protocol:	1. Wash plate 2 times before adding Standard, Sample (diluted at least 1/2 with Sample Dilution Buffer) and Control (blank) wells!
	2. Add 100 µL standard or sample to each well and incubate for 90 minutes at 37 °C.
	3. Aspirate and wash plates 2 times.
	4. Add 100 μL Biotin-labeled antibody working solution to each well and incubate for 60 minutes at 37 °C.
	5. Aspirate and wash plates 3 times.
	6. Add 100 μL SABC Working Solution into each well and incubate for 30 minutes at 37 °C.

	<ul> <li>7. Aspirate and wash plates 5 times.</li> <li>8. Add 90 μL TMB Substrate Solution. Incubate 10-20 minutes at 37 °C.</li> </ul>
	9. Add 50 $\mu L$ Stop Solution. Read at 450nm immediately and calculation.
Reagent Preparation:	<ul> <li>Bring all reagents and samples to room temperature for 20 minutes before use.</li> <li>Wash Buffer: If crystals have formed in the concentrate, you can warm it with 40 °C water bath Concentrated Wash Buffer into 750 mL Wash Buffer with deionized or distilled water. Put unused solution back at 2-8 °C.</li> <li>Standards:</li> </ul>
	<ol> <li>Add 1 mL Sample Dilution Buffer into one Standard tube (labeled as zero tube), keep the tube at room temperature for 10 minutes and mix them thoroughly. Note: If the standard tube concentration higher than the range of the kit,please dilute it and labeled as zero tube</li> <li>Label 7 EP tubes with 1/2, 1/4, 1/8, 1/16, 1/32, 1/64 and blank respectively. Add 0.3 mLof the Sample Dilution Buffer into each tube. Add 0.3 mLof the above Standard solution (fror zero tube) into 1st tube and mix them thoroughly. Transfer 0.3 mL from 1st tube to 2nd tube and mix them thoroughly. Transfer 0.3 mL from 1st tube and mix them thoroughly, and so on. Sample Dilution Buffer was used for the blank control. Note: It is best to use Standard Solutions within 2 hours.</li> <li>Preparation of Biotin-labeled Antibody Working Solution: Prepare it within 1 hour before experiment.</li> <li>Calculate required total volume of the working solution: 0.1ml/well x quantity of wells. (Allow 0.1-0.2 mLmore than the total volume.)</li> <li>Dilute the Biotin-detection antibody with Antibody Dilution Buffer at 1:100 and mix them thoroughly. (i.e. Add 1 µL Biotin-labeled antibody into 99 µL Antibody Dilution Buffer.)</li> <li>Prepare it within 30 minutes before experiment.</li> </ol>
	<ol> <li>Calculate required total volume of the working solution: 0.1ml/well x quantity of wells. (Allow 0.1-0.2 mLmore than the total volume.)</li> <li>Dilute the SABC with SABC Dilution Buffer at 1:100 and mix them thoroughly. (i.e. Add 1 μl of SABC into 99 μL of SABC Dilution Buffer.)</li> </ol>
Sample Preparation:	<ul> <li>It is recommended to use fresh samples without long storage, otherwise protein degradation and denaturationmay occur in these samples, leading to false results. Samples should therefore be stored for a short periodat 2 - 8 °C or aliquoted at -20 °C (≤1 month) or -80 °C (≤ 3 months). Repeated freeze-thawcycles should be avoided. Prior to assay, the frozen samples should be slowly thawed and centrifuged toremove precipitates.</li> <li>If the sample type is not specified in the instructions, a preliminary test is necessary to determinecompatibility with the kit.</li> </ul>
	<ul> <li>If a lysis buffer is used to prepare tissue homogenates or cell culture supernatant, there is a possibility of causing a deviation due to the introduced chemical substance. The recommended dilution factor is for reference only.</li> <li>Please estimate the concentration of the samples before performing the test. If the values are not in therange of the standard curve, the optimal sample dilution for the particular</li> </ul>

experiment has to be determined. Samples should then be diluted with PBS (pH =7.0-7.2).

#### Note:

The user should estimate the concentration of target protein in the test sample, and select a proper dilution factor to make the diluted target protein concentration fall in the optimal detection range of the kit. Dilute the sample with the provided dilution buffer, and several trials may be necessary. The test sample must be well mixed with the dilution buffer. And also standard curves and sample should be making in pre-experiment. If samples with very high concentrations, dilute samples with PBS first and then dilute the samples with Sample Dilution. The matrix components in the sample will affect the test results, which it need to be diluted at least 1/2 with Sample Dilution Buffer before testing!

#### Assay Procedure:

#### Washing

Manual: Discard the solution in the plate without touching the side walls. Clap the plate on absorbent filter papers or other absorbent material. Fill each well completely with  $350 \,\mu$ L wash buffer and soak for 1 to 2 minutes, then aspirate contents from the plate, and clap the plate on absorbent filter papers or other absorbent material.

Automatic: Aspirate all wells, and then wash plate with 350 µL wash buffer. After the final wash, invert plate, and clap the plate on absorbent filter papers or other absorbent material. It is recommended that the washer shall be set for soaking 1 minute. (Note: set the height of the needles, be sure the fluid can be sipped up completely)

When diluting samples and reagents, they must be mixed completely and evenly. Before adding TMB into wells, equilibrate TMB Substrate for 30 minutes at 37 °C. It is recommended to plot a standard curve for each test.

- 1. Set standard, test samples (diluted at least 1/2 with Sample Dilution Buffer), control (blank) wells on the pre-coated plate respectively, and then, records their positions. It is recommended to measure each standard and sample in duplicate. Wash plate 2 times before adding standard, sample and control (blank) wells!
- 2. Prepare Standards: Aliquot 100 µL of zero tube, 1sttube, 2ndtube, 3rdtube, 4thtube, 5thtube, 6thtube and Sample Dilution Buffer (blank) into the standard wells.
- 3. Add Samples: Add 100  $\mu$ L of properly diluted sample into test sample wells.
- 4. Incubate: Seal the plate with a cover and incubate at 37 °C for 90 minutes.
- 5. Wash: Remove the cover and discard the plate content, and wash plate 2 times with Wash Buffer. Do NOT let the wells dry completely at any time.
- 6. Biotin-labeled Antibody: Add 100 μL Biotin-labeled antibody working solution into above wells (standard, test sample and blank wells). Add the solution at the bottom of each well without touching the sidewall, cover the plate and incubate at 37 °C for 60 minutes.
- 7. Wash: Remove the cover, and wash plate 3 times with Wash Buffer, and let the Wash Buffer stay in the wells for 1-2 minutes each time.

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 4/6 | Product datasheet for ABIN6967650 | 09/10/2023 | Copyright antibodies-online. All rights reserved.


otavidin Conjugate (SABC): Add 100 $\mu$ L of SABC Working Solution into each well,
plate and incubate at 37 °C for 30 minutes.
move the cover and wash plate 5 times with Wash Buffer, and let the wash buffer
e wells for 1-2 minutes each time.
strate: Add 90 $\mu L$ TMB Substrate into each well, cover the plate and incubate at
ark within 10-20 minutes. (Note: The reaction time can be shortened or extended
to the actual color change, but not more than 30 minutes. You can terminate the
vhen apparent gradient appeared in standard wells.)
$50\mu\text{L}$ Stop Solution into each well. The color will turn yellow immediately. The
der of Stop Solution should be as the same as the TMB Substrate Solution.
rement: Read the O.D. absorbance at 450nm in Microplate Reader immediately
ng the stop solution.
alculation, (the relative O.D.450) = (the O.D.450 of each well) - (the O.D.450 of blank
andard curve can be plotted as the relative O.D.450 of each standard solution (Y)
ective concentration of the standard solution (X). The target concentration of the
be interpolated from the standard curve. It is recommended to use some
software to do this calculation, such as Curve Expert 1.3 or 1.4.
samples measured were diluted, multiply the dilution factor to the concentrations
lation to obtain the concentration before dilution.
CV<8%
CV<10%
h Use only
ened kit: All the reagents should be kept according to the labels on vials. The
e Standard and the 96-well stripe plate should be stored at -20 °C upon receipt while

2. For used kit: When the kit is used, the remaining reagents need to be stored according to the above storage condition. Besides, please return the unused wells to the foil pouch containing the desiccant pack, and zip-seal the foil pouch.

Expiry Date:

6 months

the other reagents should be stored at 4 °C.

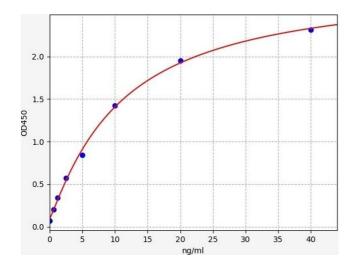

**ELISA** 

Image 1. Typical standard curve

Order at www.antibodies-online.com | www.antikoerper-online.de | www.anticorps-enligne.fr | www.antibodies-online.cn International: +49 (0)241 95 163 153 | USA & Canada: +1 877 302 8632 | support@antibodies-online.com Page 6/6 | Product datasheet for ABIN6967650 | 09/10/2023 | Copyright antibodies-online. All rights reserved.